



QUICK START SHEET

Copy this sheet to keep with the console for guest user reference.

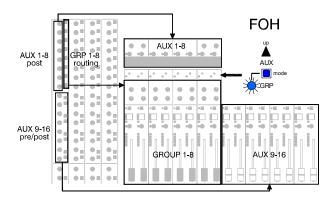

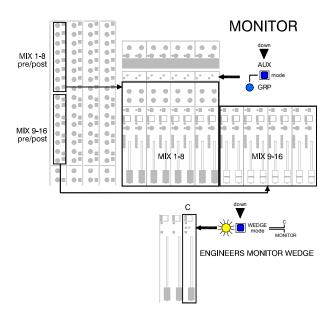

Configure the Mode Switches:



Use a pen or pointed object to select the underpanel mode switches.

FRONT-OF-HOUSE

AUX 1-8 = Post-fade for effects. Rotary masters.

AUX 9-16 = Switchable pre or post-fade and mono or stereo in pairs. Fader masters with inserts.

GROUP 1-8 = Audio groups with individual routing switches. Switchable pre or post-pan for mono or stereo groups. Fader masters with subgrouping.

MONITOR


AUX 1-8 = MIX 1-8 individually switchable pre or post-fade. Fader masters with inserts.

AUX 9-16 = MIX 9-16 switchable pre or post-fade and mono or stereo in pairs. Fader masters with inserts.

MAIN C OUT = Engineers wedge monitor.

DUAL MODE

Set the mode switches to configure fader masters 1-8 in any combination of audio groups and aux sends.

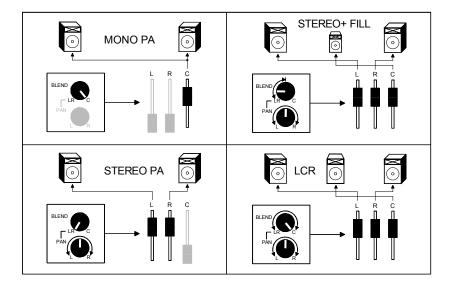



Using LCRplus™


PAN and BLEND = Two controls adjust the balance between L, R and C.

MAIN MIX = Routes the channel to the main L,R,C outputs.

 GRP PAN ON = Press for stereo (follow pan) groups.



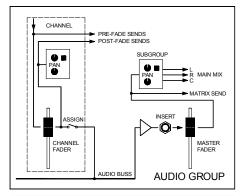

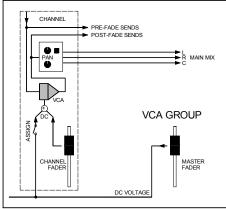


PFL / AFL AUTO CANCEL ADD MODE AFL AFL WEAGE INPUT PAFL CLEAR ALL

Using P/AFL:

Input PAFL = Select mono PFL or stereo in-place AFL.


Output AFL = Press one for mono, two together for stereo.


Input PAFL overrides output AFL. Output AFL cancels input PAFL.

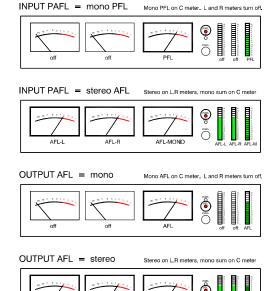

How to Assign a VCA or MUTE GROUP:

- 1. Press EDIT GROUP. The key flashes.
- 2. Press MUTE on the master you want to edit. It flashes.
- 3. Press the channel MUTE keys to assign or remove them from the group.
- Check which channels are assigned on the channel SAFE/EDIT LEDs.
- 5. Press the next master to edit. Press EDIT GROUP when finished to return to exit edit mode.

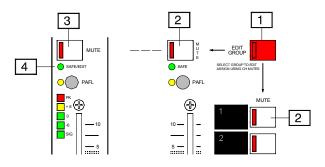

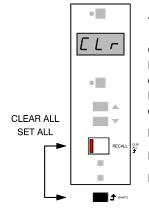

To Clear or Set All:

Clear turns all off, set turns all on. Hold down SHIFT and press RECALL once to select **CLr**, twice to select **SEt**. Release shift and press RECALL to confirm clear or set.

Normal mode = Clear/Set mutes

Edit groups = Clear/Set assignments

Edit safes = Clear/Set safes

Problems?

www.allen-heath.com

The channel is routed but there is no audio. If it is assigned to a VCA group check that the group fader is up.

The audio groups do not work. Check the setting of the fader master 1-8 GRP/AUX mode switches.

The PAN control does not work. For main mix check the setting of the BLEND control. For groups check the GRP PAN ON switch.

The console takes a long time to power up and displays UPd. Check that the rear panel slide switch is set to the MIDI position.

The snapshots do not work. Check the position of the underpanel disable switches.

The channel does not respond to the snapshots or MIDI. Check that it has not been made safe (green SAFE/EDIT LED on in normal console mode).

The STORE function does not work. Hold down SHIFT and press the UP key to toggle store on or off.